


# Spare Parts

## RT Range



> Spare Parts

> Two Stage

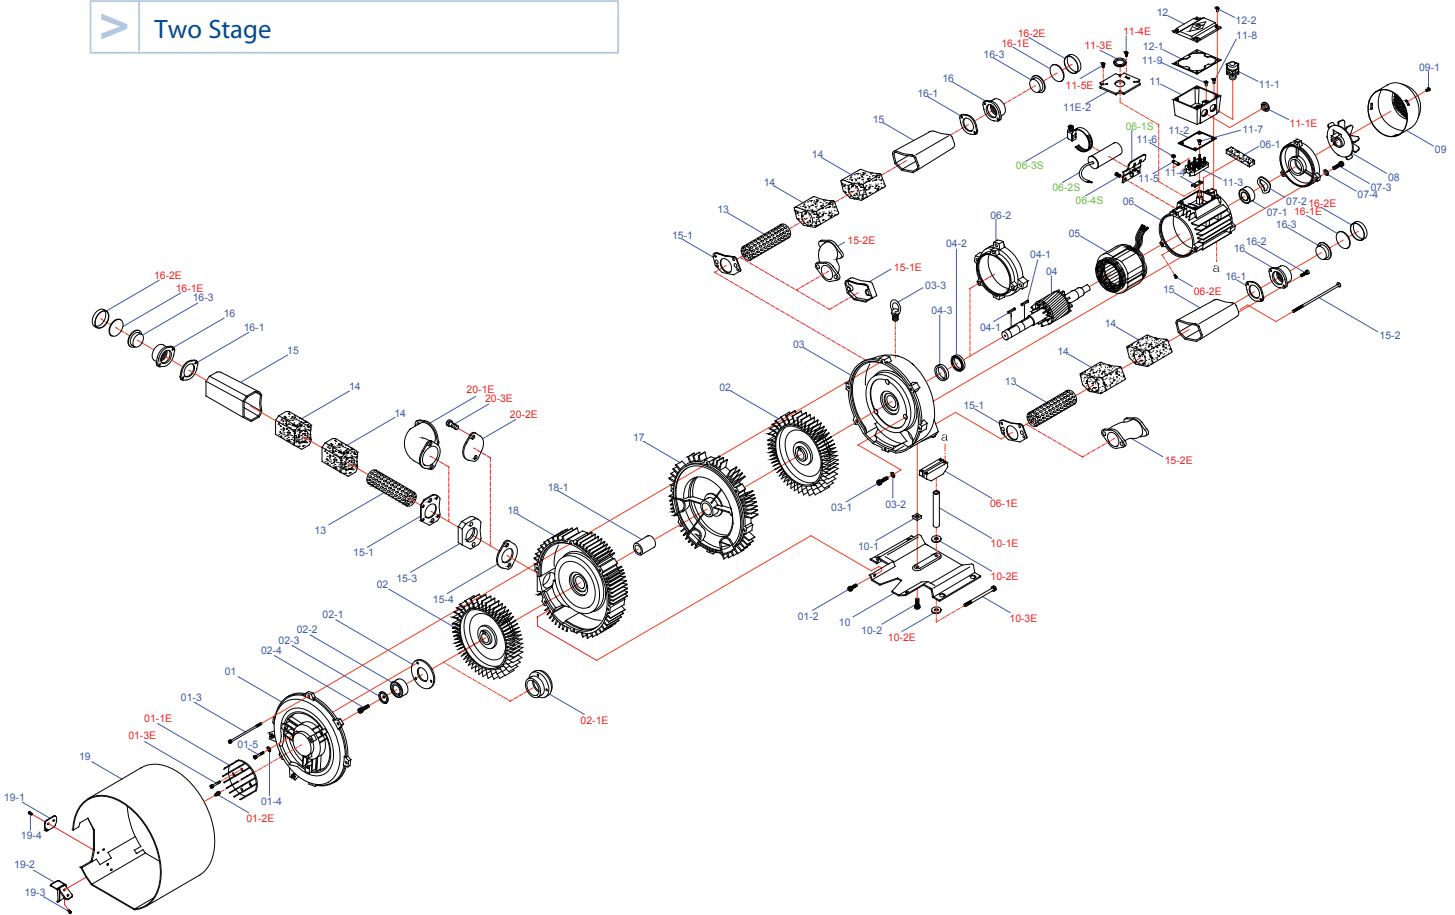

ITEM	PART NAME	ITEM	PART NAME	ITEM	PART NAME	ITEM	PART NAME
01	Compressor Cover	06-1	Sponge Filler	11-4	Board Base	16	Inlet / Outlet Flange
01-1E	Front Bearing Cover	06-2	Middle Motor Cover	11-5	Wire Connection	16-1	Inlet ( Outlet ) Gasket
01-2E	Nipple	06-1S	Capacitor Bracket	11-6	Nut	16-3	Inlet ( Outlet ) Plug
02	Impeller	06-2S	Capacitor	11-1E	Plug	16-1E	Inlet ( Outlet ) Plate
02-1	Inner Bearing Cover	06-3S	Steel Clip	11-2E	Steel Plate	16-2E	Inlet ( Outlet ) Cover
02-2	Front Bearing	07	Motor Cover	11-3E	Rubber Ring	17	Middle Cover
02-3	Disc	07-1	Rear Bearing	12	Terminal Box Cover	18	Middle Housing
02-1E	Bearing Socket	07-2	Wave Washer	12-1	Rubber Gasket ( Upper )	18-1	Impeller Fixing Set
03	Compressor Housing	08	Fan	13	Silencer Mesh	19	Protection Cowl
03-3	Bronze Ring	09	Fan Cover	14	Silencer Foam	19-1	Buckle ( Up )
04	Rotor	10	Base	15	Silencer Casing	19-2	Buckle ( Down )
04-1	Key	10-1E	Support	15-1	Silencer Gasket	20-1E	90°Extended Pipe
04-2	Oil Seal	11	Terminal Box	15-3	Silencer Socket	20-2E	End Cover
04-3	Felt Ring	11-1	Cable Gland	15-4	Silencer Socket Gasket	Parts not listed are standard ones, e.g nut,screw,washer...	
05	Stator & Coil	11-2	Rubber Gasket ( Under )	15-1E	Outlet Cover		
06	Motor Housing	11-3	Terminal Board	15-2E	Extended Pipe		